

Cleaning Instructions for the SST Machine

We recommend cleaning your SST *at least every 2-3 months*.

1. Unplug your SST from the wall outlet.

2. Remove the SST water bottle from the unit and empty any remaining water.



3. Dissolve one **ReFresh vial** in $\frac{1}{2}$ gallon of warm **distilled** water.

4. To clean the internal parts of your unit, fill the SST unit's water reservoir with this solution. This is the location where you normally place the water bottle.



5. Allow the cleaning solution to remain in the unit for at least **2-3 hours**. Do not steam the solution in the unit, as this may cause damage.

6. After soaking, pour the cleaning solution out of the unit by tilting back and forth and pouring the solution out of the water fill area.

7. Rinse the unit thoroughly by flushing with fresh water **2-3 times** to empty the solution from both the water bottle and unit, reassemble, and test.

8. Repeat the process if necessary.

Purchase the ReFresh Kit